



▶▶▶ **PRINTING INSTRUCTIONS**

**Instructions for Printing onto Mugs and Beersteins with FOREVER Multi-Trans**

▶▶▶ **PRINT SETTINGS**

**COLOR COPIER**

**Paper Mode:** See list on reverse side  
**Image Mode:** Mirror image  
**Feeding:** Bypass (manual feeding)

**LASER PRINTER**

**Paper Mode:** See list on reverse side  
**Image Mode:** Mirror image  
**Feeding:** Bypass (manual feeding)

▶▶▶ **TRANSFER SETTINGS FOR MS 50**

	<b>TRANSFERRING TIME IN SEC./LEVEL</b>	<b>FIXING TIME IN SEC./LEVEL</b>	
<b>MUG</b>	55/6 and 55/2	55/6	
<b>MIGHTY MUG</b>	70/6 and 70/2	70/6	
<b>THERMO MUG, BLACK</b>	185/3	60/6	
<b>BEERSTEIN</b>	75/6 and 75/2	75/6	

▶▶▶ **TRANSFER APPLICATION**






- ▶ Place the print on the **mug** and fix it with **heat resistant tape**.
- ▶ Place the **clamp** around the mug, close it tight and place it on the **mug press**.
- ▶ Push the start button to heat the mug according to the above mentioned settings.
- ▶ Reduce the level from 6 to 2 and push the start button again.
- ▶ Remove the clamp.
- ▶ Let the mug cool down and peel off the **FOREVER Multi-Trans**.
- ▶ Place the mug (without clamp) on the mug press again to fix the toner.












▶▶▶ **IMPORTANT!**

Please use only cold or lukewarm clamp when printing several cups!



**PRINTER COMPATIBILITY LIST  
FOREVER Multi-Trans**

BRAND	MODEL	PRINTER SETTINGS	
<b>CANON</b>	all CLC 	HEAVY PAPER	
	CP 660 	UNSUITABLE	
	IRC 2880	HEAVY PAPER 1	
	C1	HEAVY PAPER 2	
<b>DEVELOP</b>	QC 2235+	CARTON 1	
	QC 3101	CARTON 1	
	ineo 450+	CARTON 1	
	ineo 250+	CARTON 1	
<b>EPSON</b>	Laser C 8500	UNSUITABLE	
	Laser C 8600	UNSUITABLE	
	Aculaser C 1100	UNSUITABLE	
	Aculaser C1900S	LABEL	
<b>HP</b>	1500 L	HEAVY PAPER	
	2500 L	HEAVY PAPER	
	2550 L	TOUGH PAPER	
	3500 N	CARTON	
	4550	HEAVY PAPER	
	3550	CARTON	
	2600 N	UNSUITABLE	
	3600	CARTON	
<b>KYOCERA</b>	FS-C5020N	SPECIAL/HEAVY PAPER 1	
	KM-C2520	SPECIAL/HEAVY PAPER 1	
	KM-C2525E	SPECIAL/HEAVY PAPER 1	
	KM-C3225	SPECIAL/HEAVY PAPER 1	
	KM-C3232E	SPECIAL/HEAVY PAPER 1	
	KM-C4035E	SPECIAL/HEAVY PAPER 1	
<b>LEXMARK</b>	C912	HEAVY PAPER	
<b>MINOLTA</b>	MagiColor 2 	TRANSPARENCY FOIL	
	Bizhub C250/252	CARTON 1	
	Bizhub C350/351	CARTON 1	
	Bizhub C450/451	CARTON 1	
	Bizhub ProC500	UNSUITABLE	
	CF 2002	CARTON 1	
	CF 3102	CARTON 1 or 2	
	QMS 2200 	THICK PAPER	
	QMS 2300 DL	THICK STOCK	
	QMS 2350	THICK STOCK	
	MC 2400 W	LABEL	
	QMS 6100 DL 	HEAVY PAPER	
	Bizhub C253	CARTON 1	
	Bizhub C203	CARTON 1	
	Bizhub C353	CARTON 1	
	<b>SHARP</b>	MX2300N	HEAVY PAPER

BRAND	MODEL	PRINTER SETTINGS	
<b>NASHUATEC</b>	DSC 328 	TRANSPARENCY FOIL	
	MPC2000	THICK PAPER 1	
	MPC2500AD	THICK PAPER 1	
	MPC2500e	THICK PAPER 1	
	SPC 420DN	THICK 1	
	<b>OKI</b>	C 3100/3200	LABEL
		C 3100/3200	GLOSSY
		C 5200/5500	LABEL
C 5600-5900		LABEL 2	
8600-8800		LABEL 2	
C 5200/5400		LABEL	
C 5700		GLOSSY	
C 9300/9500		LABEL	
<b>RICOH</b>	C 9600	LABEL	
	C 9800	LABEL	
	Aficio AP3800C	LABEL	
	Aficio 2228C 	TRANSPARENCY FOIL	
	Aficio C 811	HEAT RESISTANT FOLIE	
	Aficio CS510E	THICK PAPER 3	
	Aficio DSC428	THICK PAPER	
	AficioCL4000DN	HEAT RESISTANT FOLIE	
<b>TALLY</b>	8004/81004 	LABEL	
	8008	LABEL	
	8204 	TRANSPARENCY FOIL	
	8006e 	HEAVY PAPER	
<b>TOSHIBA</b>	eStudio 211c 	THICK 2	
	eStudio 311c 	THICK 2	
	eStudio2500c	THICK 2	
	eStudio3500c	THICK 2	
	eStudio3510c	THICK 2	
<b>UTAX</b>	CDC1526D	HEAVY PAPER	
<b>XANTE</b>	600 	HEAVY PAPER	
	1200 PRO 	HEAVY PAPER	
	ILUMINA	LABEL	
<b>XEROX</b>	DC 12 	HEAVY PAPER	
	DC 3535	THIN PAPER	
	Workcenter 3535	LABEL	
	DC 50 	HEAVY PAPER	
	M 24	THIN PAPER	
	Phaser 7750	THIN PAPER	
	DC 240/250	HEAVY PAPER 1	
	Phaser 7400	THIN PAPER	
	DC 1250	THICK PAPER	

